

Vertical Stand

Soporte vertical / Soporte vertical / Supoer vertical

Instruction Manual / Mode d'emploi / Manual de instrucciones / Manual de instruções

CFI-ZVS1

EN

Health and Safety

Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference. Parents or guardians of children should read this manual for safe use.

Warning**YOUNG CHILDREN INJURIES**

Keep the product out of the reach of young children. Young children may swallow small parts which may inflict injury or cause an accident or a malfunction.

NEVER DISASSEMBLE OR MODIFY THE PRODUCT OR ACCESSORIES

There is a risk of injury.

Precautions

- Do not place heavy items on the product, throw or drop the product, or otherwise expose it to strong physical impact.
- Do not place the product on surfaces that are unstable, tilted, or subject to vibration.
- Do not leave the product on the floor.
- Do not expose the product or accessories to high temperatures, high humidity, or direct sunlight during operation, transportation, and storage.
- Do not remove the vertical stand immediately after using your PlayStation®5 console as the stand's mounting screw may become hot during use and cause burns.

Care and cleaning

Follow the precautions below to help prevent the product exterior from deteriorating or discoloring.

- Do not apply volatile substances such as insecticide.
- Do not allow rubber or vinyl materials to be in prolonged contact with the product.
- Do not use thinner, benzine, or alcohol. Avoid using wipes, chemically-treated cloths, and other products that contain such substances.
- Wipe with a soft, dry cloth.


Attach the stand

The method of attachment differs between the CFI-2000 model group and the CFI-1000 model group consoles. Make sure to follow the correct attachment method for your console model. Place your console on a soft cloth spread over a flat surface before attaching the stand.

Attaching the stand to a CFI-2000 model group console

- 1 Go to the control center and select Power > Turn Off PSS. The screen goes blank, the power indicator flashes white, and then turns off.


- 2 Place the PS5® console with the rear side facing up and then remove the screw cap.

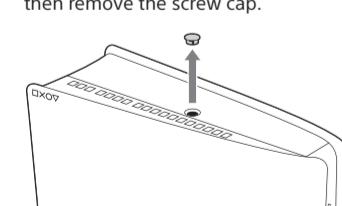


- 3 Attach the screw cap to the screw hole (marked with Δ) on the stand.




You can also use a coin to tighten the screw.

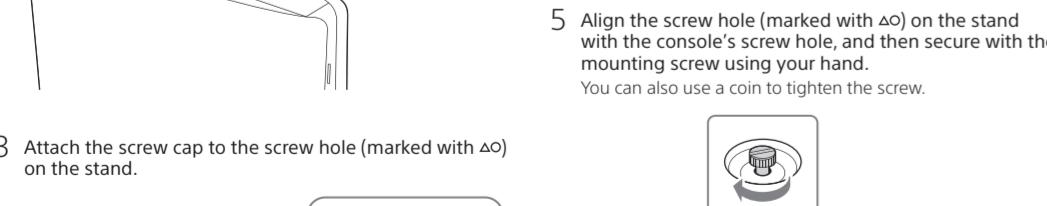


- 4 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

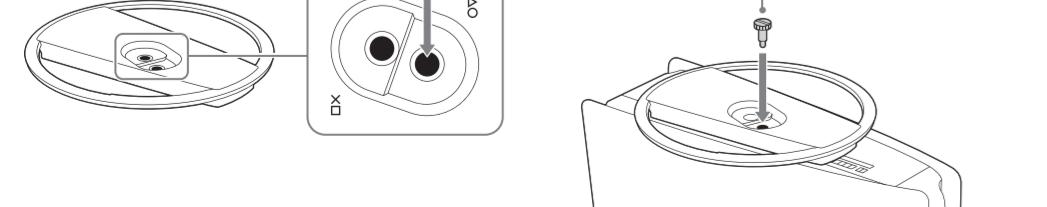

You can also use a coin to tighten the screw.

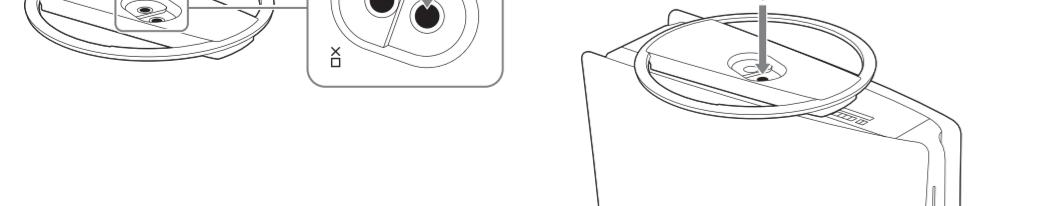


- 5 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

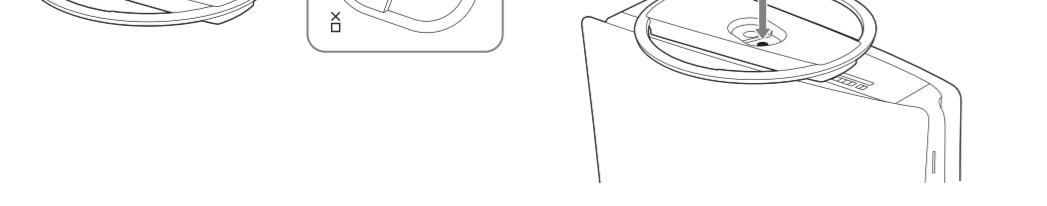


You can also use a coin to tighten the screw.


- 6 Attach the screw cap to the screw hole (marked with Δ) on the stand.

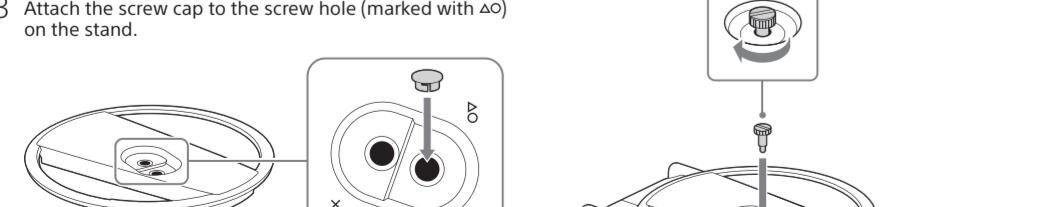

You can also use a coin to tighten the screw.

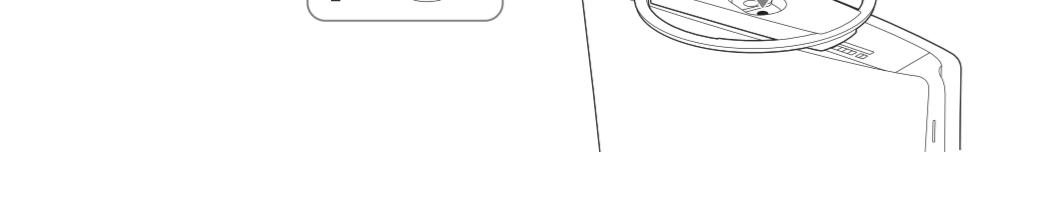

 - 7 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.



You can also use a coin to tighten the screw.



- 8 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.



You can also use a coin to tighten the screw.



- 9 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.



You can also use a coin to tighten the screw.



- 10 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.



You can also use a coin to tighten the screw.

- 11 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 12 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 13 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 14 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 15 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 16 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 17 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 18 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 19 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 20 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 21 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 22 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 23 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 24 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 25 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 26 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 27 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 28 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 29 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 30 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

- 31 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.


- 32 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.


- 33 Align the screw hole (marked with Δ) on the stand with the console's screw hole, and then secure with the mounting screw using your hand.

You can also use a coin to tighten the screw.

4 Encaixe a tampa do parafuso na abertura do parafuso (indicada com Δ) do suporte.
Você também pode usar uma moeda para apertar o parafuso.

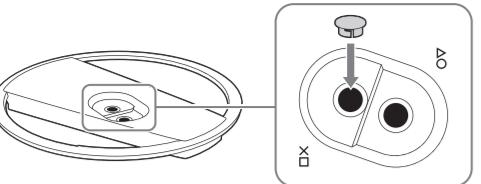

5 Alineie a abertura do parafuso (indicada com Δ) no suporte com a abertura do parafuso do console e, em seguida, fixe-o com o parafuso de montagem usando sua mão.
Você também pode usar uma moeda para apertar o parafuso.

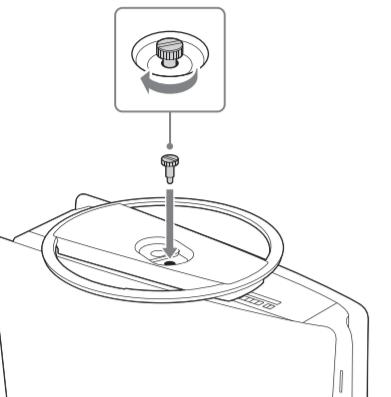

Especificações

Dimensões externas (exceto as partes salientes)	Sem o painel: aprox. 155 x 11 x 155 mm (l x a x p) Com o painel: aprox. 155 x 14 x 155 mm (l x a x p)
Peso	Sem o painel: aprox. 140 g Com o painel: aprox. 157 g
Temperatura de operação	5 °C a 35 °C

O design e as especificações estão sujeitos a alterações sem aviso prévio.

Reciclagem do produto ao término de sua vida útil

Este produto é fabricado com vários materiais que podem ser reciclados. Quando o produto chegar ao término de sua vida útil, descarte-o de acordo com as leis e diretrizes ambientais locais vigentes.

Garantia limitada

Este produto possui garantia contra defeitos de fabricação e funcionamento de todas as peças e componentes por um período de um (1) ano a partir da data de entrega final ao consumidor. Para que esta garantia tenha efeito, o consumidor deve apresentar o produto com a devida polícia de garantia carimbada ou a nota fiscal de compra, no local onde ele foi adquirido ou em loja autorizada da Sony Interactive Entertainment do Brasil Comércio e Serviços de Marketing Ltda. ("SIEB") para obter atendimento a esse produto. Uma lista destes centros pode ser obtida entrando em contato com a Central de relacionamento da SIEB indicada nesta garantia.

Para obter mais informações, visite nosso website www.playstation.com.br.

A SIEB compromete-se a consertar ou trocar o produto conforme necessário e conforme a legislação local aplicável de onde o produto foi adquirido sem nenhum encargo para o cliente. O período de troca ou conserto não deverá ultrapassar 30 dias, contados a partir da data de recebimento do produto em local onde esta política de garantia possa ser efetuada.

Os custos de transporte e mão de obra decorrentes da implementação desta política de garantia ficam a encargo da SIEB.

Exceções à garantia

Esta garantia não terá validade nos seguintes casos:

- O produto foi utilizado em condições anormais.
- O produto não foi utilizado segundo as instruções.
- O produto foi modificado ou consertado por pessoal não autorizado pela SIEB.

Central de Relacionamento Sony

São Paulo Capital e região metropolitana: 011-3351-7090

Demais localidades: 0800 724 8310

"", "PlayStation" and "PS5" are registered trademarks or trademarks of Sony Interactive Entertainment Inc.

"SONY" and "" are registered trademarks or trademarks of Sony Group Corporation.

"", "PlayStation" et "PS5" sont des marques déposées ou des marques commerciales de Sony Interactive Entertainment Inc.

"SONY" et "" sont des marques déposées ou des marques commerciales de Sony Group Corporation.

"", "PlayStation" y "PS5" son marcas comerciales registradas o marcas comerciales de Sony Interactive Entertainment Inc.

"SONY" y "" son marcas comerciales registradas o marcas comerciales de Sony Group Corporation.

"", "PlayStation" e "PS5" são marcas registradas ou marcas comerciais da Sony Interactive Entertainment Inc.

"SONY" e "" são marcas registradas ou marcas comerciais da Sony Group Corporation.



© 2023 Sony Interactive Entertainment LLC.
Printed in the United States / Imprimé aux États-Unis /
Impreso en los Estados Unidos / Impresso nos Estados Unidos