



EN

## Precautions

Before using this product, carefully read this manual and retain it for future reference. Read also the instructions for the PlayStation 3 system.

### Safety

- Observe all warnings, precautions and instructions.
- CHOKING HAZARD - Small parts. Keep out of the reach of small children.

### Use and handling

- Stop using the system immediately if you begin to feel tired or if you experience discomfort or pain in your head while operating the wireless stereo headset. If the condition persists, consult a doctor.
- The vibration function of the wireless stereo headset can aggravate injuries. Do not use the vibration function if you have any ailment or injury to the bones, joints or muscles of your head.
- Avoid prolonged use of the wireless stereo headset. Take a break at about 30-minute intervals.
- Permanent hearing loss may occur if the headset is used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing:
  - Limit the amount of time you use the headset at high volume.
  - Avoid raising the volume to block out noisy surroundings.
  - Lower the volume if you can't hear people speaking near you.
- If you feel that the headset is irritating your skin, stop using it immediately.
- Do not expose the headset to high temperatures, high humidity or direct sunlight.
- Do not put heavy objects on the headset.
- Do not allow liquid or small particles to get into the headset.
- Do not throw or drop the headset or subject it to strong physical shock.
- Do not place any rubber or vinyl materials on the headset exterior for an extended period of time.
- Use a soft, dry cloth to clean the headset. Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth.
- Do not disassemble or insert anything into the headset because this may cause damage to the internal components or cause injury to you.
- Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres or aircraft.
- The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 60 °C / 140 °F, or incinerate.

### FCC and IC Notice

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption rate (SAR).

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For assistance with this product, visit [www.us.playstation.com](http://www.us.playstation.com) or call SCEA Consumer Services at 1-800-345-7669.

Declaration of Conformity	
Trade Name :	Sony Computer Entertainment America LLC
Model No. :	CECHYA-0085, CECHYA-0086
Responsible Party :	Sony Computer Entertainment America LLC
Address :	919 E. Hilldale Blvd., Foster City, CA 94404 U.S.A.
Telephone No. :	650-655-8000

This device complies with Part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


This Class B digital apparatus complies with Canadian ICES-003.

### Before disposing of the wireless stereo headset


The wireless stereo headset is made of plastics, metals and a Lithium-ion battery. Follow local regulations when disposing of the system. Sony products can be recycled for free in the United States and Canada by dropping the product off at a number of nationwide locations. Visit [www.sony.com/ecotrade](http://www.sony.com/ecotrade) and [www.eco.sony.ca](http://www.eco.sony.ca) for details.

## Part names and functions


### Front

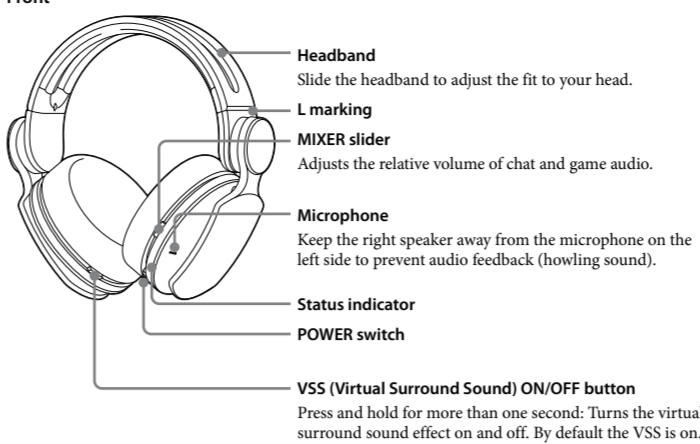


### Rear

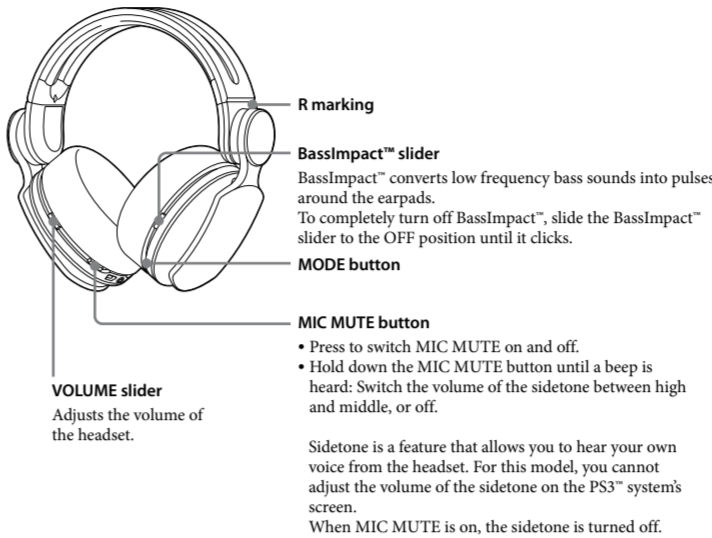

### Bottom

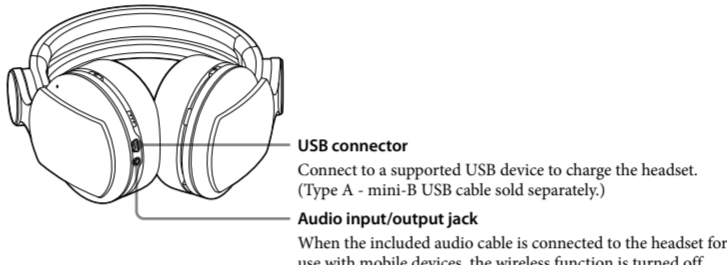


### Wireless adaptor

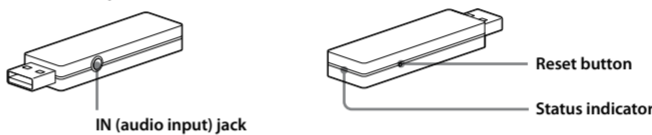

## Using the headset with the PS3™ system

Compatible with PS3™ system software version 4.20 or later. Only one headset at a time can be used with the PS3™ system.


### 1 Insert the wireless adaptor in the USB connector.

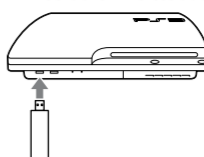

### 2 Slide the POWER switch on the headset to ON.

### Status display

When the headset is used with a PS3™ system, the following status information is displayed in the upper right corner of the screen:



	Displayed when [Stereo Headset Audio Extension] is set to [On] *
	Displayed when Virtual Surround sound is enabled
	Displays volume level
	Displayed when the microphone is turned off
	Displays battery charge level

\* Stereo Headset Audio Extension is a system setting that controls the type of audio output to the wireless stereo headset. It is available only when the wireless adaptor is inserted.

### Audio Output Selection

With the wireless stereo headset you can listen to PS3™ system audio, including music, videos and games, in Virtual Surround Sound.


- You can listen to both game audio and chat audio simultaneously. Use the MIXER slider to adjust the relative volume of game audio vs. chat audio.
- You can change the audio output to the headset so that you can hear only chat audio.

To change the audio output, and enable/disable the VSS (Virtual Surround Sound) ON/OFF button and MIXER slider, select (Settings) (Accessory Settings) .

Stereo Headset Audio Extension	Audio output to headset	VSS (Virtual Surround Sound) ON/OFF button	MIXER slider
On	All audio	Enabled	Enabled
Off	Chat audio only	Disabled	Disabled

### Listen to TV audio wirelessly

You can wirelessly listen to audio from your TV using the headset. If you connect your TV's audio output (headphone jack) and the wireless adaptor using the audio cable (included with this product), the audio will be switched.

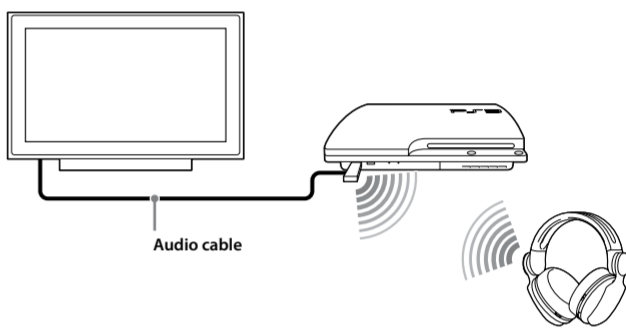

### Hints

- The headset can be used with any television or monitor with a headphone jack.
- The audio from the USB audio source is not output when the included audio cable is connected to the wireless adaptor. When you want to hear audio from the USB audio source, remove the audio cable from the wireless adaptor.
- Wireless adaptor needs to be connected to a powered USB port such as a PS3™ system or television USB port (if available).

## Using the headset with a PC

You can use the headset with a PC (with Windows® or Mac OS) that has a USB connector. Insert the wireless adaptor into a USB connector on the PC you want to use and then turn on the headset.


For further instructions about use of the headset with Windows® or Mac OS, visit [us.playstation.com/support/wirelessstereoheadset](http://us.playstation.com/support/wirelessstereoheadset).

### Hints

- The headset is not guaranteed to work with every PC that has a USB connector.
- The VSS (Virtual Surround Sound) ON/OFF button and MIXER slider can be used only when the headset is connected to a PS3™ system.

## Using with a portable device

You can use the included audio cable to connect the headset to the headphone jack of portable devices such as the PlayStation®Vita system, allowing you to listen to audio and use the voice chat feature.

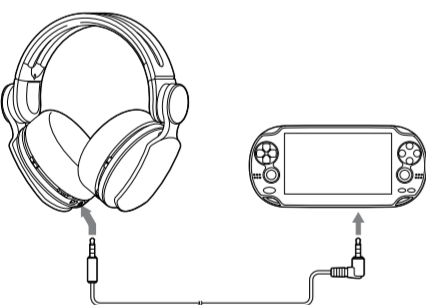

### Hints

- When the included audio cable is connected to the headset, the VSS (Virtual Surround Sound) ON/OFF button and the MIXER slider cannot be used.
- Output volume varies depending on the portable device that is connected. Adjust volume accordingly.
- You can use the included stereo audio cable to connect the headset to your mobile device to listen to audio content and talk on the phone.
  - If you are unable to hear audio content using the cable with your mobile device, turn the headset power off to enable functionality.
  - Your device may require a standard stereo audio cable (sold separately) to listen to audio content using the headset. Note that standard audio cables do not support voice communication.
  - This product is not compatible with all mobile devices. Some features may not work on all mobile devices. For further information on mobile device compatibility, visit <http://us.playstation.com/support/wirelessstereoheadset>

## Charging the Headset

When remaining battery level is low, the status indicator flashes red and a beep is heard. Charge the battery by connecting the headset to a supported USB device such as a PC. While the battery is charging, the status indicator lights up red. The status indicator light turns off when the battery is fully charged.

### Hints

- You can check the remaining battery charge on the PS3™ system screen.
- You might not be able to charge the battery if the USB device or the USB hub does not provide enough power for charging. Try connecting the headset to a different USB device or a different USB connector on the device.
- Charging takes approximately 3.5 hours when starting with no battery charge left.
- When the remaining battery charge is low, the headset beeps while it is connected and receiving an audio signal.
- It is recommended that you charge the battery in an environment with a temperature of 10 °C to 30 °C (50 °F to 86 °F). Charging in other environments might not be as effective.
- If you do not plan to use the wireless stereo headset for an extended period of time, it is recommended that you fully charge it at least once a year to help maintain battery functionality.

## Status indicator display

### Headset

Indicator color	Flashing pattern	Headset status
Blue	Solid	In use
	Flashing once repeatedly	Pairing mode
	Flashing twice repeatedly	Connection standby mode
Red	Solid	Charging
Purple	Solid	Microphone input off
Light green	Solid	Analog audio input (output)
Orange	Solid	System software update in progress

### Wireless adaptor

Indicator color	Flashing pattern	Headset status
Blue/Light green *	Solid	In use
	Flashing once repeatedly	Pairing mode
	Flashing twice repeatedly	Connection standby mode

\* When the included audio cable is connected to the wireless adaptor.

## Switching between modes

You can select a mode to accompany the content you are playing. Each mode has been optimized to deliver a distinct BassImpact™ effect which enhances the overall audio experience. Switch between modes by pressing the MODE button. Each time you switch between modes, there will be voice confirmation.

Mode	Characteristics	Voice indicator
Game	BassImpact™ optimized to intensify the gaming experience.	"Game"
Music	BassImpact™ optimized for music.	"Music"
Movie	BassImpact™ optimized for movies.	"Movie"
Shooter	BassImpact™ lets you feel the footsteps of enemies around you and amplifies the effects of explosions and gunfire.	"Shooter"
Fighting	BassImpact™ allows you to feel the impacts of punches and kicks while fighting. The strength of hits is mirrored in BassImpact™ effects.	"Fighting"
Racing	BassImpact™ lets you feel the engine sounds of competitors around you and augments the effects of acceleration, collisions, and crashes.	"Racing"


### Hints

- Keep holding down the MODE button to return to the default mode (Game).
- To comfortably use the headset, adjust the left and right sides of the headband equally.
- For Game, Music, and Movie modes, the BassImpact™ slider changes the strength of the BassImpact™ effect you feel. For other modes, the BassImpact™ slider is used to optimize the BassImpact™ effect for those genres. Adjust the BassImpact™ slider accordingly to optimize your personal audio experience for each mode.

## Resetting the headset

If the headset does not respond when you try to operate it, reset it by doing the following:

- With the wireless adaptor connected to the PS3™ system, insert a small pin or similar object into the hole for the reset button and press down for at least one second.

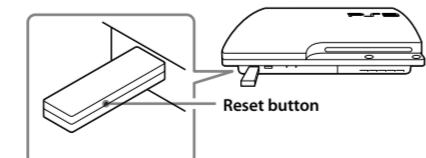

- Hold down the MIC MUTE button, the MODE button, and the VSS (Virtual Surround Sound) ON/OFF button on the headset, and then slide the POWER switch to ON. When the reset is complete, the headset and wireless adaptor will be connected.

## Specifications

<b>Power source</b>	DC 3.7 V Built-in lithium-ion rechargeable battery
<b>Battery capacity</b>	925 mAh
<b>Operating environment temperature</b>	5 °C - 35 °C / 41 °F - 95 °F
<b>Dimensions (w/h/d)</b>	Wireless stereo headset: Approx. 183 × 182 × 90 mm (7.2 × 7.2 × 3.5 in.) Wireless adaptor: Approx. 17.4 × 8.6 × 67.4 mm (0.7 × 0.3 × 2.7 in.)
<b>Weight</b>	Wireless stereo headset: Approx. 320 g (11.3 oz) Wireless adaptor: Approx. 7 g (0.25 oz)
<b>Communication system</b>	2.4 GHz RF
<b>Maximum communication range</b>	Approx. 10 m (33 ft) <sup>*1</sup>
<b>Use time when fully charged</b>	Approx. 4.0 hours (music with BassImpact™) <sup>*2</sup> Approx. 6.0 hours (music only) <sup>*2</sup>
<b>Contents</b>	Wireless stereo headset (1) / Audio cable 1.2 m (1) / Wireless adaptor (1) / Instruction manual (1)

<sup>\*1</sup> Actual communication range varies depending on factors such as obstacles between the headset and wireless adaptor, magnetic fields from electronics (such as a microwave oven), static electricity, antenna performance, and the operating system and software applications in use. Depending on the operating environment, reception may be interrupted.

<sup>\*2</sup> Actual use time varies depending on factors such as the battery charge and ambient temperature.

Design and specifications are subject to change without notice.

## LIMITED WARRANTY

Sony Computer Entertainment America LLC ("SCEA") warrants to the original purchaser that this product shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase. This warranty does not apply to any consumables (such as batteries). For defects in material or workmanship within the warranty period, upon showing a proof of purchase, SCEA agrees for a period of one (1) year to either repair or replace this product with a new or factory recertified product at SCEA's option. For the purpose of this Limited Warranty, "factory recertified" means a product that has been returned to its original specifications. Visit <http://www.us.playstation.com/support> or call 1-800-345-7669 to receive a return authorization and shipping instructions. This warranty shall not be applicable and shall be void if the defect in the SCEA product has arisen through abuse, unreasonable use, mistreatment, neglect, or means other than from a defect in materials or workmanship.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE SCEA. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE (1) YEAR PERIOD DESCRIBED ABOVE. IN NO EVENT WILL SCEA BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE OR MALFUNCTION OF THE SCEA PRODUCT. SOME STATES OR PROVINCES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS AND SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

This warranty is valid only in the United States and Canada.

The Wireless Stereo Headset for PlayStation 3 brings dynamic sound to your entertainment experience. Please note, wireless products may be affected by the presence of other wireless devices in the general vicinity. If you experience any unexpected performance with your Wireless Stereo Headset please contact us before returning it to your retailer.

For more information or assistance with your Wireless Stereo Headset, please visit: <http://us.playstation.com/support/wirelessstereoheadset> or call SCEA Consumer Services at 1-800-345-7669.



### Précautions

Veillez lire attentivement les informations de ce manuel d'instructions et de l'emballage du produit avant toute utilisation. Veillez également prendre connaissance du manuel d'instructions du système PlayStation.3. Merci de conserver toute la documentation afin de pouvoir vous y référer à l'avenir.

### Sécurité

- Observez tous les avertissements, précautions et instructions.
- RISQUE D'ÉTOUFFEMENT - Petites pièces. Gardez hors de portée des jeunes enfants.

### Utilisation et manipulation

- Arrêtez immédiatement d'utiliser le système en cas de fatigue, de gêne ou de douleur lors de l'utilisation du casque-micro stéréo sans fil. Si les symptômes persistent, consultez un médecin.
- La fonction vibration du casque-micro stéréo sans fil peut aggraver les lésions. N'utilisez pas la fonction vibration si vous souffrez de troubles ou de lésions au niveau des os, articulations ou des muscles de la tête.
- Évitez l'utilisation prolongée du casque-micro stéréo sans fil. Faites une pause environ toutes les 30 minutes.
- L'utilisation de foreillette à un volume trop élevé peut entraîner une perte d'audition permanente. Réglez le volume à un niveau qui ne présente aucun risque. Bien qu'avèc le temps un volume audio élevé puisse paraître normal, il n'en demeure pas moins que le risque de perte d'audition reste présent. Si vous ressentez des affilements dans les oreilles ou que les voix vous paraissent être étouffées, arrêtez immédiatement l'écoute et consultez un spécialiste pour passer un audiogramme. Plus le volume est élevé, plus vite votre ouïe en subira les conséquences. Pour protéger votre ouïe :
  - Limitez la durée d'utilisation de foreillette à des volumes sonores élevés.
  - Évitez d'augmenter le volume dans le but d'éteouffer les environnements bruyants.
  - Baissez le volume si vous n'entendez pas les gens parler autour de vous.
- Si le casque-micro entraîne une irritation de la peau, cessez immédiatement de l'utiliser.
- N'exposez pas foreillette à des températures élevées, une humidité excessive ou au rayonnement direct du soleil.
- Ne posez aucun objet lourd sur foreillette.
- Ne laissez aucun liquide ou petite particule entrer dans foreillette.
- Ne lancez pas foreillette, ne la laissez pas tomber et ne la soumettez pas à des chocs physiques violents.
- Ne laissez aucun objet en caoutchouc ou en vinyle au contact extérieur de foreillette pendant une période prolongée.
- Essayez foreillette à l'aide d'un chiffon doux et sec. N'utilisez aucun solvant ou autre produit chimique. N'utilisez aucun chiffon ayant été traité chimiquement.
- Ne démontez pas ou n'insérez rien à l'intérieur de foreillette pour éviter d'endommager les composants internes ou de vous blesser.
- Observez toute indication d'éteindre les appareils électriques ou radioélectroniques dans certains endroits, notamment dans des stations service ou des points de ravitaillement en carburant, aux alentours des hôpitaux ou des zones de dynamitage, dans des atmosphères potentiellement explosives ou encore dans des aéronéfs.
- La batterie utilisée de cet appareil peut présenter un risque d'incendie ou de brûlure chimique si elle est manipulée de façon incorrecte. Ne pas la désassembler, l'exposer à des températures supérieures à 60 °C / 140 °F ou la jeter au feu.

### Déclaration de la FCC et de l'IC

Cet équipement est conforme aux limites d'exposition aux radiofréquences IC établies pour un environnement non contrôlé et se conforme aux exigences de conformité pour l'exposition aux RF IC, dans le supplément C à OET65 et CNR-102. Cet équipement possède des niveaux d'énergie RF très bas se conformant sans tests nécessaires aux taux d'absorption spécifique (SAR).

Cet émetteur ne doit pas être utilisé conjointement ou placé avec tout autre émetteur ou antenne.

### Remarque :

Cette unité a été testée et jugée conforme aux normes stipulées par l'article 15 des règlements de la FCC pour un appareil numérique de catégorie B. Ces normes sont établies afin d'offrir une protection raisonnable contre toute possibilité de brouillage préjudiciable dans une installation résidentielle. Cette unité produit, utilise et peut émettre une énergie radioélectrique, et si elle n'est pas installée et utilisée conformément aux instructions, pourrait causer un brouillage préjudiciable à la radiocommunication. Il est toutefois impossible de garantir qu'il n'y aura pas de brouillage préjudiciable dans une installation donnée. Si cette unité cause un brouillage préjudiciable à la réception radio ou télévisuelle, ce qui peut être déterminé en mettant l'appareil hors tension puis sous tension, l'utilisateur est encouragé à tenter de corriger le brouillage en prenant l'une ou plusieurs des mesures proposées suivantes :

- Réorienter ou déplacer l'antenne de réception.
- Éloigner l'unité du récepteur.
- Connecter l'appareil à une prise sur un autre circuit que celui auquel le récepteur est connecté.
- Demander de l'aide au détaillant ou à un technicien radio/télévision spécialisé.

Aucun changement ou modification n'est permis sans avoir été approuvé par les parties responsables des réglementations qui sont en droit d'interdire l'utilisation de ce produit par l'utilisateur.

Pour toute assistance avec ce produit, visitez notre site Web à l'adresse [www.us.playstation.com](http://www.us.playstation.com) ou appelez le service consommateurs SCEA au 1-800-345-7669.

Déclaration de conformité	
Nom commercial <span> </span> :	Sony Computer Entertainment America LLC
N° de modèle <span> </span> :	CECHYA-0085, CECHYA-0086
Partie responsable <span> </span> :	Sony Computer Entertainment America LLC
Adresse <span> </span> :	919 E. Hillisdale Blvd., Foster City, CA 94404 U.S.A.
N° de téléphone <span> </span> :	650-655-8000
Cet appareil est conforme aux stipulations de l'article 15 des règlements de la FCC et CNR-Gen des règles IC.	
Son opération est sous réserve des deux conditions suivantes <span> </span> :	
(1) cet appareil ne peut pas causer de brouillage préjudiciable et (2) cet appareil doit accepter le brouillage préjudiciable reçu, y compris un brouillage qui pourrait causer son fonctionnement irrégulier.	

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### Avant de mettre le casque-micro stéréo sans fil au rebut

Le casque-micro stéréo sans fil est composé de plastiques, de métaux et d'une batterie lithium-ion. Suivez les règlements applicables de votre région lorsque vous souhaitez jeter ce système. Les produits Sony peuvent être recyclés gratuitement aux États-Unis et au Canada en les déposant dans un centre de recyclage. Pour trouver un centre, consultez [www.sony.com/ecotrade](http://www.sony.com/ecotrade) et [www.eco.sony.ca](http://www.eco.sony.ca) pour plus de détails.

### Nom et fonction des pièces

<b>Avant</b>	
<span></span>	<b>Arceau</b> Faites glisser l'arceau pour l'ajuster à votre tête.
<span></span>	<b>Marque L</b>
<span></span>	<b> Curseur de MIXER</b> Réglez le volume relatif du chat et de l'environnement sonore du jeu.
<span></span>	<b>Microphone</b> Gardez le haut-parleur droit à l'écart du microphone sur le côté gauche afin d'éviter le retour audio (effet Larsen).
<span></span>	<b>Indicateur de statut</b>
<span></span>	<b>Interrupteur POWER</b>
<span></span>	<b>Touche VSS (Audio VSS) ON/OFF</b> Appuyez pour placer le MIC MUTE sur ON ou OFF. La fonction VSS est activée par défaut.

<b>Arrière</b>	
<span></span>	<b>Marque R</b>
<span></span>	<b> Curseur de BassImpact™</b> BassImpact™ convertit les sons graves à basse fréquence en pulsations autour des oreillettes. Pour désactiver complètement BassImpact™, placez le curseur de BassImpact™ sur OFF jusqu'au décli.
<span></span>	<b>Touche MODE</b>
<span></span>	<b>Touche MIC MUTE</b> <ul style="list-style-type: none"><li>Appuyez pour placer le MIC MUTE sur ON ou OFF.</li> <li> Maintenez la touche MIC MUTE jusqu'à ce qu'elle émette un son<span> </span>: vous pouvez régler l'écho sur élevé et moyen ou off.</li></ul>
<span></span>	<b> Curseur de VOLUME</b> Réglez le volume du casque-micro.

L'écho est une fonctionnalité qui vous permet d'entendre votre voix dans le casque-micro. Ce modèle ne permet pas d'ajuster le volume de l'écho depuis l'écran du système PS3™. Lorsque la fonction MIC MUTE est activée, l'écho est désactivé.

<b>Dessus</b>	
<span></span>	<b>Connecteur USB</b> Connectez-vous à un périphérique USB pour recharger foreillette. (Câble USB type A - mini-B vendu séparément.)
<span></span>	<b>Fiche d'entrée/sortie audio</b> Lorsque le câble audio inclus est connecté au casque-micro pour une utilisation avec des périphériques mobiles, la fonction sans fil est désactivée.

<b>l'adaptateur sans fil</b>	
<span></span>	<b>Fiche IN (entrée audio)</b>
<span></span>	<b>Touche de réinitialisation</b>
<span></span>	<b>Indicateur de statut</b>

### Comment utiliser le casque-micro avec le système PS3™

Compatible avec le logiciel système du système PS3™ version 4.20 ou supérieure. Un seul casque-micro à la fois peut être utilisé avec un système PS3™.

- Insérez l'adaptateur sans fil dans le connecteur USB.**



- Placez l'interrupteur POWER du casque sur ON.**

### Affichage du statut

Lorsque le casque-micro est utilisé avec un système PS3™, les informations de statut suivantes s'affichent dans le coin supérieur droit de l'écran :

<span></span>	Wireless Stereo Headset
<span></span>	S'affiche quand [Extension audio du casque-micro stéréo] est réglé sur [Oui] *
<span></span>	S'affiche quand Virtual Surround est activé
<span></span>	Indique le niveau du volume
<span></span>	Indique que le microphone est désactivé
<span></span>	Indique le niveau de charge de la batterie

- \* L'extension audio du casque-micro stéréo est un paramètre système qui contrôle le type de sortie audio du casque-micro stéréo sans fil. Il est disponible uniquement quand l'adaptateur sans fil est inséré.

### Sélection de la sortie audio

Le casque-micro sans fil vous permet d'écouter du contenu audio du système PS3™, y compris de la musique, des vidéos et des jeux, grâce au son surround virtuel (Audio VSS).


- Vous pouvez écouter en même temps le contenu audio du jeu et du chat. Utilisez le curseur de MIXER pour ajuster le volume sonore du jeu et du chat.
- Vous pouvez changer la sortie audio du casque-micro pour entendre uniquement le chat.

Pour modifier l'entrée audio et activer/désactiver la touche VSS (Audio VSS) ON/OFF et le curseur de MIXER, choisissez  (Paramètres)   (Paramètres accessoires)  [Extension audio du casque-micro stéréo].

Extension audio du casque-micro stéréo	Sortie audio du casque-micro	Touche VSS (Audio VSS) ON/OFF	Glissière de mixage
Oui	Toutes les sorties audio	Activé	Activé
Non	Conversation audio seule	Désactivé	Désactivé

### Écoutez sans fil le son émis par votre téléviseur

Vous pouvez utiliser le casque-micro sans fil pour écouter le son émis par votre téléviseur. Raccordez la sortie audio de votre téléviseur (prise casque) à l'adaptateur sans fil au moyen du câble audio (fourni avec ce produit) pour que le son soit diffusé dans le casque-micro.

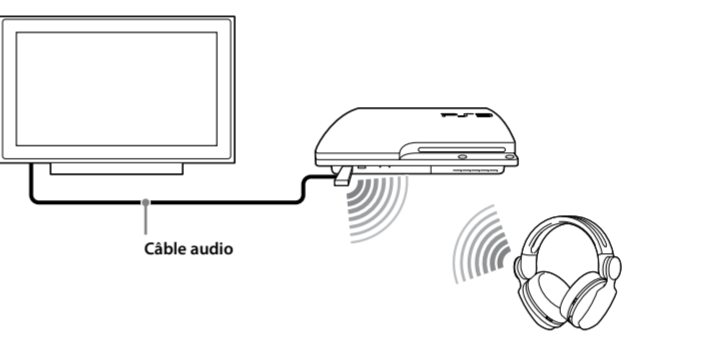

### Utiliser le casque-micro avec un PC

Vous pouvez utiliser le casque-micro avec un PC (Windows® ou Mac OS) équipé d'un connecteur USB. Insérez l'adaptateur sans fil dans un connecteur USB du PC que vous souhaitez utiliser, et allumez le casque-micro.


Pour en savoir plus sur l'utilisation du casque-micro avec Windows® ou Mac OS, visitez le site Web [us.playstation.com/support/wirelessstereoheadset](http://us.playstation.com/support/wirelessstereoheadset).

### Conseils

- Le casque-micro n'est pas garanti pour fonctionner avec tous les PC équipés d'un connecteur USB.
- La touche VSS (Audio VSS) ON/OFF et la glissière de mixage ne sont utilisables que lorsque le casque-micro est connecté à un système PS3™.

### Utiliser avec un appareil portable

Vous pouvez utiliser le câble audio fourni pour brancher le casque-micro à la prise casque d'appareils portables tels le système PlayStation®Vita pour écouter de la musique ou profiter de la fonctionnalité chat vocal.

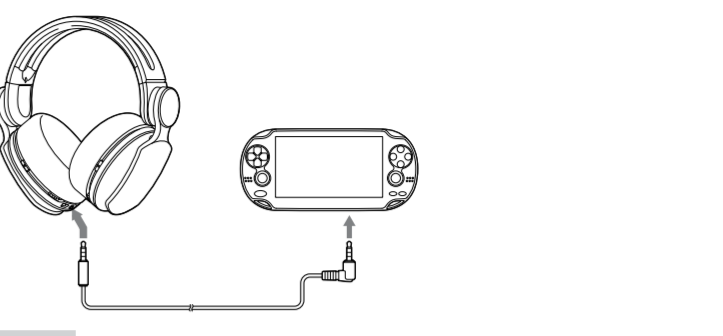

#### Conseils

- Lorsque le câble audio fourni est connecté au casque-micro, la touche VSS (Audio VSS) ON/OFF et le curseur de MIXER ne peuvent pas être utilisés.
- Le volume de sortie varie selon l'appareil portable utilisé. Ajustez le volume en conséquence.
- Vous pouvez utiliser le câble audio stéréo fourni pour connecter le casque-micro à votre appareil mobile afin d'écouter du contenu audio et de passer des appels téléphoniques.
  - Si aucun son n'est émis de votre appareil mobile, éteignez votre casque-micro pour activer la fonctionnalité.
  - Il est possible que votre appareil mobile nécessite un câble audio standard (vendu séparément) pour écouter du contenu audio avec votre casque-micro. Remarque : les câbles audio standard ne sont pas compatibles avec la fonction de communication vocale.
  - Ce produit n'est pas compatible avec tous les appareils mobiles. Certaines fonctionnalités peuvent ne pas fonctionner sur tous les appareils mobiles. Pour en savoir plus sur la compatibilité des appareils mobiles, rendez-vous sur la page <http://us.playstation.com/support/wirelessstereoheadset>.

### Utiliser avec un appareil portable

Quand le niveau de charge de la batterie est faible, l'indicateur de statut clignote en rouge et émet un son. Pour recharger la batterie, connectez le casque-micro à un périphérique USB, comme un PC. Pendant que la batterie se recharge, l'indicateur de statut s'allume en rouge. L'indicateur de statut s'éteint lorsque la batterie est complètement rechargée.

### Conseils

- Vous pouvez vérifier l'état de charge de votre batterie sur l'écran de votre système PS3™.
- Il est possible que vous ne puissiez pas recharger la batterie si le périphérique ou le hub USB n'est pas assez puissant. Essayez de connecter le casque-micro à un autre périphérique USB ou un autre connecteur USB du même périphérique.
- Environ 3,5 heures de recharge sont nécessaires lorsque la batterie est complètement vide.
- Lorsque la batterie est presque vide, le casque-micro émet un signal sonore lorsqu'il est connecté et qu'il reçoit un signal audio.
- Il est recommandé de recharger la batterie dans un environnement d'une température de 10 °C à 30 °C (50 °F à 86 °F). Recharger dans tout autre type d'environnement peut être moins efficace.
- Si vous prévoyez de ne pas utiliser le casque-micro stéréo sans fil pendant une période prolongée, nous vous conseillons de la charger complètement au moins une fois par an pour préserver la batterie.